


Indirect Low-angle Square Lights FPQ2 Series



Low-angle, diffuse illumination enables characters and defects to be uniformly illuminated with no LED glare.





High-output Low-angle Light Unit

This square-shaped Light Unit was developed with a high shutter speed and low angle, while still maintaining a high



Shutter speed: 1/1,000 sec. Light intensity: 100% dimming

FPQ2 series(Red)



Shutter speed: 1/1,000 sec. Light intensity: 100% dimming

Perfect Compact Size for Extremely Small Parts

The 20 x 20-mm compact size of this Light Unit makes it perfect for chip parts, integrated circuits, and other extremely small parts.









A Lineup of Light Units for a Wide Range of Applications

Select from six sizes: 20 x 20 mm, 32 x 32 mm, 48 x 48 mm, 75 x 75 mm, 96 x 96 mm, or 120 x 120 mm. There is a selection of three LED light colors: red, white, and blue. The lineup offers 18 size and color combinations.














FPQ2-20 Series FPQ2-32 Series FPQ2-48 Series FPQ2-75 Series FPQ2-96 Series

FPQ2-120 Series

Illumination structure of FPQ2-96

The object is illuminated from a low angle by uniform diffuse light through the light conduction plate.

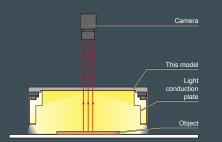

Examples of low-angle Square Light images

Imaging Exterior of Food Packs


The entire outer surface of the square-shaped Light used: FPQ2-96RD



The lead of the IC is uniformly illuminated

The lead of the IC is uniformly illuminated.

Light Unit used: FPQ2-75SW

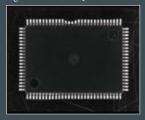

Imaging Exterior of Food Products

Even the entire surface of this rounded shape is illuminated uniformly.

Light used: FPQ2-75SW



Product Lineup Table

Direct Number: You can easily access the web page providing information on any desired product by simply entering the 7-digit direct number in the space provided. (Refer to the back cover of this brochure.)

Series	Direct Number	Model Name	Color	Power Consumption	Option	Dimension
FPQ2	1005263	FPQ2-20RD	•	24V/1.5W		1
	1005264	FPQ2-20SW	0	24V/2.6W		
	1005265	FPQ2-20BL		24V/1.8W		
	1005266	FPQ2-32RD	•	24V/6.1W	_	2
	1005267	FPQ2-32SW	0	24V/5.1W		
	1005268	FPQ2-32BL		24V/3.1W		
	1005269	FPQ2-48RD	•	24V/5.8W	_	3
	1005270	FPQ2-48SW	0	24V/11W		
	1005271	FPQ2-48BL		24V/7.1W		
	1005272	FPQ2-75RD	•	24V/17W		4
	1005273	FPQ2-75SW	0	24V/16W		
	1005274	FPQ2-75BL		24V/9.1W		
	1005275	FPQ2-96RD	•	24V/15W	_	5
	1005276	FPQ2-96SW	0	24V/21W		
	1005277	FPQ2-96BL		24V/13W		
	1005278	FPQ2-120RD	•	24V/18W	_	6
	1005279	FPQ2-120SW	0	24V/21W		
	1005280	FPQ2-120BL		24V/11W		

Existing Low-angle Square Light FPQ series will be discontinued. FPQ2 series is recommended as replacement.

Dimension Diagrams (Unit: mm)

